

Q系列线束 印字表

三菱电机  
PLC线束

欧姆龙  
PLC线束

基恩士  
PLC线束

松下电机  
PLC线束

横河电机  
PLC线束

富士电机  
PLC线束

光洋电机  
PLC线束

西门子  
PLC线束

施耐德  
PLC线束

AB  
PLC线束

**QY71用**

GPP-Q23R□  
GPN-Q23□

**输出连接器**

信号名	B	A	信号名
Y00	20	20	Y10
Y01	19	19	Y11
Y02	18	18	Y12
Y03	17	17	Y13
Y04	16	16	Y14
Y05	15	15	Y15
Y06	14	14	Y16
Y07	13	13	Y17
Y08	12	12	Y18
Y09	11	11	Y19
Y0A	10	10	Y1A
Y0B	9	9	Y1B
Y0C	8	8	Y1C
Y0D	7	7	Y1D
Y0E	6	6	Y1E
Y0F	5	5	Y1F
	4	4	
	3	3	
	2	2	COM_B
	1	1	COM_A

5/12VDC\_B  
5/12VDC\_A

**FCN插针40芯**

**QD70P4用**

GPP-Q28R□  
GPN-Q28□

**输入输出连接器1**

信号名	B	A	信号名
PG02COM	20	20	PG04COM
PG02	19	19	PG04
PG01COM	18	18	PG03COM
PG01	17	17	PG03
CLEAR2COM	16	16	CLEAR4COM
CLEAR2	15	15	CLEAR4
CLEAR1COM	14	14	CLEAR3COM
CLEAR1	13	13	CLEAR3
CHG2	12	12	CHG4
CHG1	11	11	CHG3
DOG2	10	10	DOG4
DOG1	9	9	DOG3
COM1-2	8	8	COM3-4
PULSEF2	7	7	PULSEF4
PULSECOM2	6	6	PULSECOM4
PULSER2	5	5	PULSER4
PULSEF1	4	4	PULSEF3
PULSECOM1	3	3	PULSECOM3
PULSER1	2	2	PULSER3
	1	1	24G

+24V

**FCN插针40芯**

**QY42P用**

GPP-Q24R□  
GPN-Q24□

**输出连接器1**

信号名	B	A	信号名
Y00	20	20	Y10
Y01	19	19	Y11
Y02	18	18	Y12
Y03	17	17	Y13
Y04	16	16	Y14
Y05	15	15	Y15
Y06	14	14	Y16
Y07	13	13	Y17
Y08	12	12	Y18
Y09	11	11	Y19
Y0A	10	10	Y1A
Y0B	9	9	Y1B
Y0C	8	8	Y1C
Y0D	7	7	Y1D
Y0E	6	6	Y1E
Y0F	5	5	Y1F
	4	4	
	3	3	
	2	2	COM1_B
	1	1	COM1_A

12/24VDC\_B  
12/24VDC\_A

**FCN插针40芯**

**输出连接器2**

信号名	B	A	信号名
Y20	20	20	Y30
Y21	19	19	Y31
Y22	18	18	Y32
Y23	17	17	Y33
Y24	16	16	Y34
Y25	15	15	Y35
Y26	14	14	Y36
Y27	13	13	Y37
Y28	12	12	Y38
Y29	11	11	Y39
Y2A	10	10	Y3A
Y2B	9	9	Y3B
Y2C	8	8	Y3C
Y2D	7	7	Y3D
Y2E	6	6	Y3E
Y2F	5	5	Y3F
	4	4	
	3	3	
	2	2	COM2_B
	1	1	COM2_A

12/24VDC\_B  
12/24VDC\_A

**FCN插针40芯**

**QD70P8用**

GPP-Q29R□  
GPN-Q29□

**输入输出连接器1**

信号名	B	A	信号名
PG06COM	20	20	PG08COM
PG06	19	19	PG08
PG05COM	18	18	PG07COM
PG05	17	17	PG07
CLEAR6COM	16	16	CLEAR8COM
CLEAR6	15	15	CLEAR8
CLEAR5COM	14	14	CLEAR7COM
CLEAR5	13	13	CLEAR7
CHG6	12	12	CHG8
CHG5	11	11	CHG7
DOG6	10	10	DOG8
DOG5	9	9	DOG7
COM5-6	8	8	COM7-8
PULSEF6	7	7	PULSEF8
PULSECOM6	6	6	PULSECOM8
PULSER6	5	5	PULSER8
PULSEF5	4	4	PULSEF7
PULSECOM5	3	3	PULSECOM7
PULSER5	2	2	PULSER7
	1	1	

**FCN插针40芯**

**输入输出连接器2**

信号名	B	A	信号名
PG02COM	20	20	PG04COM
PG02	19	19	PG04
PG01COM	18	18	PG03COM
PG01	17	17	PG03
CLEAR2COM	16	16	CLEAR4COM
CLEAR2	15	15	CLEAR4
CLEAR1COM	14	14	CLEAR3COM
CLEAR1	13	13	CLEAR3
CHG2	12	12	CHG4
CHG1	11	11	CHG3
DOG2	10	10	DOG4
DOG1	9	9	DOG3
COM1-2	8	8	COM3-4
PULSEF2	7	7	PULSEF4
PULSECOM2	6	6	PULSECOM4
PULSER2	5	5	PULSER4
PULSEF1	4	4	PULSEF3
PULSECOM1	3	3	PULSECOM3
PULSER1	2	2	PULSER3
	1	1	24G

+24V

**FCN插针40芯**

**QD75P1用**

GPP-Q33R□  
GPN-Q33□

**输入输出连接器**

信号名	B	A	信号名
	20	20	PULSERB+
	19	19	PULSERA+
	18	18	PULSECOM_2
	17	17	PULSER
	16	16	PULSECOM_1
	15	15	PULSEF
	14	14	CLRCOM
	13	13	CLR
	12	12	RDYCOM
	11	11	READY
	10	10	PG0COM
	9	9	PG05
	8	8	PG024
	7	7	COM_2
	6	6	COM_1
	5	5	CHG
	4	4	STOP
	3	3	DOG
	2	2	RLS
	1	1	FLS

**FCN插针40芯**

**QD75P2用**

GPP-Q34R□  
GPN-Q34□

**输入输出连接器**

信号名	B	A	信号名
	20	20	PULSERB+
	19	19	PULSERA+
JLSECOM_B2	18	18	PULSECOM_A2
PULSER_B	17	17	PULSER_A
JLSECOM_B1	16	16	PULSECOM_A1
PULSERF_B	15	15	PULSERF_A
CLRCOM_B	14	14	CLRCOM_A
CLEAR_B	13	13	CLEAR_A
RDYCOM_B	12	12	RDYCOM_A
READY_B	11	11	READY_A
PG0COM_B	10	10	PG0COM_A
PG05_B	9	9	PG05_A
PG024_B	8	8	PG024_A
COM_B2	7	7	COM_A2
COM_B1	6	6	COM_A1
CHG_B	5	5	CHG_A
STOP_B	4	4	STOP_A
DOG_B	3	3	DOG_A
RLS_B	2	2	RLS_A
FLS_B	1	1	FLS_A

**FCN插针40芯**

\*为区别相同的信号名，此处的信号名可能与PLC制造商的使用手册中的记载有少许差异，请确认后再订购。  
\*无信号名标记的引脚为未接线。  
\*□内填入Y或T。