

QD75P4用			
GPP-Q36R□ GPN-Q36□		GPP-Q35R□ GPN-Q35□	
输入输出连接器2		输入输出连接器1	
信号名	B A	信号名	B A
PULSECOM_B2	20 20	PULSERB+	20 20
PULSER_B	19 19	PULSER+	19 19
PULSECOM_B1	18 18	PULSERB+	18 18
PULSER_B	17 17	PULSER+	17 17
PULSERF_B	16 16	PULSERF+	16 16
PULSERF+_B	15 15	PULSERF+_A	15 15
CLRCOM_B	14 14	CLRCOM_A	14 14
CLEAR_B	13 13	CLEAR_A	13 13
RDYCOM_B	12 12	RDYCOM_A	12 12
READY_B	11 11	READY_A	11 11
PGOCOM_B	10 10	PGOCOM_A	10 10
PG05_B	9 9	PG05_A	9 9
PG024_B	8 8	PG024_A	8 8
COM_B2	7 7	COM_A2	7 7
COM_B1	6 6	COM_A1	6 6
CHG_B	5 5	CHG_A	5 5
STOP_B	4 4	STOP_A	4 4
DOG_B	3 3	DOG_A	3 3
RLS_B	2 2	RLS_A	2 2
FLS_B	1 1	FLS_A	1 1
FCN插针40芯		FCN插针40芯	

QD75D1用			
GPP-Q37R□ GPN-Q37□		输入输出连接器	
信号名	B A	信号名	B A
PULSERB+	20 20	PULSERB+	20 20
PULSER+	19 19	PULSER+	19 19
PULSERB+	18 18	PULSERB+	18 18
PULSER+	17 17	PULSER+	17 17
PULSERF+	16 16	PULSERF+	16 16
PULSERF+_A	15 15	PULSERF+_A	15 15
CLRCOM_A	14 14	CLRCOM_A	14 14
CLEAR_A	13 13	CLEAR_A	13 13
RDYCOM_A	12 12	RDYCOM_A	12 12
READY_A	11 11	READY_A	11 11
PGOCOM_A	10 10	PGOCOM_A	10 10
PG05_A	9 9	PG05_A	9 9
PG024_A	8 8	PG024_A	8 8
COM_A2	7 7	COM_A2	7 7
COM_A1	6 6	COM_A1	6 6
CHG_A	5 5	CHG_A	5 5
STOP_A	4 4	STOP_A	4 4
DOG_A	3 3	DOG_A	3 3
RLS_A	2 2	RLS_A	2 2
FLS_A	1 1	FLS_A	1 1
FCN插针40芯		FCN插针40芯	

QD75D2用			
GPP-Q38R□ GPN-Q38□		输入输出连接器	
信号名	B A	信号名	B A
PULSERB+	20 20	PULSERB+	20 20
PULSER+	19 19	PULSER+	19 19
PULSERB+	18 18	PULSERB+	18 18
PULSER+	17 17	PULSER+	17 17
PULSERF+	16 16	PULSERF+	16 16
PULSERF+_A	15 15	PULSERF+_A	15 15
CLRCOM_A	14 14	CLRCOM_A	14 14
CLEAR_A	13 13	CLEAR_A	13 13
RDYCOM_A	12 12	RDYCOM_A	12 12
READY_A	11 11	READY_A	11 11
PGOCOM_A	10 10	PGOCOM_A	10 10
PG05_A	9 9	PG05_A	9 9
PG024_A	8 8	PG024_A	8 8
COM_A2	7 7	COM_A2	7 7
COM_A1	6 6	COM_A1	6 6
CHG_A	5 5	CHG_A	5 5
STOP_A	4 4	STOP_A	4 4
DOG_A	3 3	DOG_A	3 3
RLS_A	2 2	RLS_A	2 2
FLS_A	1 1	FLS_A	1 1
FCN插针40芯		FCN插针40芯	

QD75D4用			
GPP-Q42R□ GPN-Q42□		GPP-Q39R□ GPN-Q39□	
输入输出连接器2		输入输出连接器1	
信号名	B A	信号名	B A
PULSERB+	20 20	PULSERB+	20 20
PULSER+	19 19	PULSER+	19 19
PULSERB+	18 18	PULSERB+	18 18
PULSER+	17 17	PULSER+	17 17
PULSERF+	16 16	PULSERF+	16 16
PULSERF+_A	15 15	PULSERF+_A	15 15
CLRCOM_A	14 14	CLRCOM_A	14 14
CLEAR_A	13 13	CLEAR_A	13 13
RDYCOM_A	12 12	RDYCOM_A	12 12
READY_A	11 11	READY_A	11 11
PGOCOM_A	10 10	PGOCOM_A	10 10
PG05_A	9 9	PG05_A	9 9
PG024_A	8 8	PG024_A	8 8
COM_A2	7 7	COM_A2	7 7
COM_A1	6 6	COM_A1	6 6
CHG_A	5 5	CHG_A	5 5
STOP_A	4 4	STOP_A	4 4
DOG_A	3 3	DOG_A	3 3
RLS_A	2 2	RLS_A	2 2
FLS_A	1 1	FLS_A	1 1
FCN插针40芯		FCN插针40芯	

QD75M1用			
GPP-Q43R□ GPN-Q43□		输入输出连接器	
信号名	B A	信号名	B A
PULSERB+	20 20	PULSERB+	20 20
PULSER+	19 19	PULSER+	19 19
PULSERB+	18 18	PULSERB+	18 18
PULSER+	17 17	PULSER+	17 17
PULSERF+	16 16	PULSERF+	16 16
PULSERF+_A	15 15	PULSERF+_A	15 15
CLRCOM_A	14 14	CLRCOM_A	14 14
CLEAR_A	13 13	CLEAR_A	13 13
RDYCOM_A	12 12	RDYCOM_A	12 12
READY_A	11 11	READY_A	11 11
PGOCOM_A	10 10	PGOCOM_A	10 10
PG05_A	9 9	PG05_A	9 9
PG024_A	8 8	PG024_A	8 8
COM_A2	7 7	COM_A2	7 7
COM_A1	6 6	COM_A1	6 6
CHG_A	5 5	CHG_A	5 5
STOP_A	4 4	STOP_A	4 4
DOG_A	3 3	DOG_A	3 3
RLS_A	2 2	RLS_A	2 2
FLS_A	1 1	FLS_A	1 1
FCN插针40芯		FCN插针40芯	

QD75M2用			
GPP-Q44R□ GPN-Q44□		输入输出连接器	
信号名	B A	信号名	B A
PULSERB+	20 20	PULSERB+	20 20
PULSER+	19 19	PULSER+	19 19
PULSERB+	18 18	PULSERB+	18 18
PULSER+	17 17	PULSER+	17 17
PULSERF+	16 16	PULSERF+	16 16
PULSERF+_A	15 15	PULSERF+_A	15 15
CLRCOM_A	14 14	CLRCOM_A	14 14
CLEAR_A	13 13	CLEAR_A	13 13
RDYCOM_A	12 12	RDYCOM_A	12 12
READY_A	11 11	READY_A	11 11
PGOCOM_A	10 10	PGOCOM_A	10 10
PG05_A	9 9	PG05_A	9 9
PG024_A	8 8	PG024_A	8 8
COM_A2	7 7	COM_A2	7 7
COM_A1	6 6	COM_A1	6 6
CHG_A	5 5	CHG_A	5 5
STOP_A	4 4	STOP_A	4 4
DOG_A	3 3	DOG_A	3 3
RLS_A	2 2	RLS_A	2 2
FLS_A	1 1	FLS_A	1 1
FCN插针40芯		FCN插针40芯	

QD75M4用			
GPP-Q46R□ GPN-Q46□		GPP-Q45R□ GPN-Q45□	
输入输出连接器2		输入输出连接器1	
信号名	B A	信号名	B A
PULSERB+	20 20	PULSERB+	20 20
PULSER+	19 19	PULSER+	19 19
PULSERB+	18 18	PULSERB+	18 18
PULSER+	17 17	PULSER+	17 17
PULSERF+	16 16	PULSERF+	16 16
PULSERF+_A	15 15	PULSERF+_A	15 15
CLRCOM_A	14 14	CLRCOM_A	14 14
CLEAR_A	13 13	CLEAR_A	13 13
RDYCOM_A	12 12	RDYCOM_A	12 12
READY_A	11 11	READY_A	11 11
PGOCOM_A	10 10	PGOCOM_A	10 10
PG05_A	9 9	PG05_A	9 9
PG024_A	8 8	PG024_A	8 8
COM_A2	7 7	COM_A2	7 7
COM_A1	6 6	COM_A1	6 6
CHG_A	5 5	CHG_A	5 5
STOP_A	4 4	STOP_A	4 4
DOG_A	3 3	DOG_A	3 3
RLS_A	2 2	RLS_A	2 2
FLS_A	1 1	FLS_A	1 1
FCN插针40芯		FCN插针40芯	

QD62用			
GPP-Q47R□ GPN-Q47□		QD62连接器	
信号名	B A	信号名	B A
B20	20 20	A20	20 20
B19	19 19	A19	19 19
B18	18 18	A18	18 18
B17	17 17	A17	17 17
B16	16 16	A16	16 16
B15	15 15	A15	15 15
B14	14 14	A14	14 14
B13	13 13	A13	13 13
B12	12 12	A12	12 12
B11	11 11	A11	11 11
B10	10 10	A10	10 10
B9	9 9	A9	9 9
B8	8 8	A8	8 8
B7	7 7	A7	7 7
B6	6 6	A6	6 6
B5	5 5	A5	5 5
B4	4 4	A4	4 4
B3	3 3	A3	3 3
B2	2 2	A2	2 2
B1	1 1	A1	1 1
FCN插针40芯		FCN插针40芯	

QD62D用			
GPP-Q48R□ GPN-Q48□		输入输出连接器	
信号名	B A	信号名	B A
B20	20 20	A20	20 20
B19	19 19	A19	19 19
B18	18 18	A18	18 18
B17	17 17	A17	17 17
B16	16 16	A16	16 16
B15	15 15	A15	15 15
B14	14 14	A14	14 14
B13	13 13	A13	13 13
B12	12 12	A12	12 12
B11	11 11	A11	11 11
B10	10 10	A10	10 10
B9	9 9	A9	9 9
B8	8 8	A8	8 8
B7	7 7	A7	7 7
B6	6 6	A6	6 6
B5	5 5	A5	5 5
B4	4 4	A4	4 4
B3	3 3	A3	3 3
B2	2 2	A2	2 2
B1	1 1	A1	1 1
FCN插针40芯		FCN插针40芯	

*为区别相同的信号名，此处的信号名可能与PLC制造商的使用手册中的记载有少许差异，请确认后再订购。

*无信号名标记的引脚为未接线。

*□内填入Y或T。

*该产品的信号名较复杂，因此号管上的内容为连接器引脚号。

*该产品的信号名较复杂，因此号管上的内容为连接器引脚号。