

OMRON PLC Harnesses
欧姆龙PLC线束

CS系列线束 印字表

CS1W-HCP22-V1用

GPN-CS64□

输入输出连接器1

信号名	B	A	信号名
B12	12	12	A12
B11	11	11	A11
B10	10	10	A10
B9	9	9	A9
B8	8	8	A8
B7	7	7	A7
B6	6	6	A6
B5	5	5	A5
B4	4	4	A4
B3	3	3	A3
B2	2	2	A2
B1	1	1	A1

FCN插针24芯

GPN-CS74□
GPP-CS74L□

输入输出连接器2

信号名	A	B	信号名
A1	1	1	B1
A2	2	2	B2
A3	3	3	B3
A4	4	4	B4
A5	5	5	B5
A6	6	6	B6
A7	7	7	B7
A8	8	8	B8
A9	9	9	B9
A10	10	10	B10
A11	11	11	B11
A12	12	12	B12
A13	13	13	B13
A14	14	14	B14
A15	15	15	B15
A16	16	16	B16
A17	17	17	B17
A18	18	18	B18
A19	19	19	B19
A20	20	20	B20

FCN插针40芯

*该产品的信号名较复杂，因此号码管上的内容为连接器引脚号。

CS1W-HCA22-V1用

GPN-CS65□

输入输出连接器1

信号名	B	A	信号名
B12	12	12	A12
B11	11	11	A11
B10	10	10	A10
B9	9	9	A9
B8	8	8	A8
B7	7	7	A7
B6	6	6	A6
B5	5	5	A5
B4	4	4	A4
B3	3	3	A3
B2	2	2	A2
B1	1	1	A1

FCN插针24芯

GPN-CS75□
GPP-CS75L□

输入输出连接器2

信号名	A	B	信号名
A1	1	1	B1
A2	2	2	B2
A3	3	3	B3
A4	4	4	B4
A5	5	5	B5
A6	6	6	B6
A7	7	7	B7
A8	8	8	B8
A9	9	9	B9
A10	10	10	B10
A11	11	11	B11
A12	12	12	B12
A13	13	13	B13
A14	14	14	B14
A15	15	15	B15
A16	16	16	B16
A17	17	17	B17
A18	18	18	B18
A19	19	19	B19
A20	20	20	B20

FCN插针40芯

*该产品的信号名较复杂，因此号码管上的内容为连接器引脚号。

CS1W-HCA12-V1用

GPN-CS66□

输入输出连接器1

信号名	B	A	信号名
B12	12	12	A12
B11	11	11	A11
B10	10	10	A10
B9	9	9	A9
B8	8	8	A8
B7	7	7	A7
B6	6	6	A6
B5	5	5	A5
B4	4	4	A4
B3	3	3	A3
B2	2	2	A2
B1	1	1	A1

FCN插针24芯

GPN-CS76□
GPP-CS76L□

输入输出连接器2

信号名	A	B	信号名
A1	1	1	B1
A2	2	2	B2
A3	3	3	B3
A4	4	4	B4
A5	5	5	B5
A6	6	6	B6
A7	7	7	B7
A8	8	8	B8
A9	9	9	B9
A10	10	10	B10
A11	11	11	B11
A12	12	12	B12
A13	13	13	B13
A14	14	14	B14
A15	15	15	B15
A16	16	16	B16
A17	17	17	B17
A18	18	18	B18
A19	19	19	B19
A20	20	20	B20

FCN插针40芯

*该产品的信号名较复杂，因此号码管上的内容为连接器引脚号。

CS1W-MC221用

GPN-CS88□
GPP-CS88□

输入输出连接器

2	XCVL	1	+24	15	ZCWL	14	DC GND
4	XCVL	3	YCWL	17	MPG-A	16	MPG-A
6	XSTOP	5	YCCWL	19	MPG-B	18	MPG-A
8	IN1	7	YSTOP	21	IN3	20	
10	XORG	9	IN2	23		22	IN4
12	OUT1	11	YORG	25	OUT3	24	
		13	OUT2	26	OUT3	25	OUT4

MDR插针26芯

GPN-CS92□
GPP-CS92□

DRV连接器

2	DC GND	1	+24V	20	FDC GND	19	+F24V
4	XRUN	3	XALM	22	YRUN	21	YALM
6		5	XALMRS	24		23	VALMRS
8	XSGND	7		26	YSGND	25	
10	X-GND	9	XSOUT	28	Y-GND	27	YSOUT
12	X-A	11	X-A	30	Y-A	29	Y-A
14	X-B	13	X-B	32	Y-B	31	Y-B
16	X-Z	15	X-Z	34	Y-Z	33	Y-Z
18	XAGND	17	XOUT	36	YAGND	35	YOUT

MDR插孔36芯

CS1W-HIO01-V1用

GPN-CS67□

输入输出连接器

信号名	B	A	信号名
B12	12	12	A12
B11	11	11	A11
B10	10	10	A10
B9	9	9	A9
B8	8	8	A8
B7	7	7	A7
B6	6	6	A6
B5	5	5	A5
B4	4	4	A4
B3	3	3	A3
B2	2	2	A2
B1	1	1	A1

FCN插针24芯

*该产品的信号名较复杂，因此号码管上的内容为连接器引脚号。

CS1W-MC421用

GPN-CS89□
GPP-CS89□

输入输出连接器

2	XCVL	1	+24	15	ZCWL	14	DC GND
4	XCVL	3	YCWL	17	ZCWL	16	UCWL
6	XSTOP	5	YCCWL	19	ZSTOP	18	UCWL
8	IN1	7	YSTOP	21	IN3	20	USTOP
10	XORG	9	IN2	23	ZORG	22	IN4
12	OUT1	11	YORG	25	OUT3	24	UORG
		13	OUT2	26	OUT3	25	OUT4

MDR插孔26芯

GPN-CS87□
GPP-CS87□

MPG连接器

2		3		9		8	
4		5	MPG-A	11		10	
6	MPG-A	7		13	MPG-B	14	

MDR插孔14芯

GPN-CS93□
GPP-CS93□

DRV X · Y连接器

2	DC GND	1	+24V	20	FDC GND	19	+F24V
4	XRUN	3	XALM	22	YRUN	21	YALM
6		5	XALMRS	24		23	VALMRS
8	XSGND	7		26	YSGND	25	
10	X-GND	9	XSOUT	28	Y-GND	27	YSOUT
12	X-A	11	X-A	30	Y-A	29	Y-A
14	X-B	13	X-B	32	Y-B	31	Y-B
16	X-Z	15	X-Z	34	Y-Z	33	Y-Z
18	XAGND	17	XOUT	36	YAGND	35	YOUT

MDR插孔36芯

GPN-CS94□
GPP-CS94□

DRV Z · U连接器

2	DC GND	1	+24V	20	FDC GND	19	+F24V
4	ZRUN	3	ZALM	22	URUN	21	UALM
6		5	ZALMRS	24		23	UALMRS
8	ZSGND	7		26	USGND	25	
10	Z-GND	9	ZSOUT	28	U-GND	27	USOUT
12	Z-A	11	Z-A	30	U-A	29	U-A
14	Z-B	13	Z-B	32	U-B	31	U-B
16	Z-Z	15	Z-Z	34	U-Z	33	U-Z
18	ZAGND	17	ZOUT	36	UAGND	35	UOUT

MDR插孔36芯

*为区别相同的信号名，此处的信号名可能与PLC制造商的使用手册中的记载有少许差异，请确认后再订购。
*无信号名标记的引脚为未接线。
*□内填入Y或T。